

Комплектующие к корпусам / Spare parts-Holder / Pièces de rechange

Обозначение Designation Désignation	Винт Screw Vis	Динамометрический момент Torque Tournevis dynamométrique	Torx ключ Torx key Clé Torx
KLB3-1400R20 bis..1650R20	AS 0035	0,6 Nm	T5106-IP
KLB3-1700R20 bis..1950R25	AS 0036	1,0 Nm	T5106-IP
KLB3-2000R25 bis..2300R25	AS 0037	1,3 Nm	T5108-IP
KLB3-2350R32 bis..2800R32	AS 0038	2,2 Nm	T5108-IP
KLB3-2900R32 bis..3500R40	AS 0039	3,4 Nm	T5115-IP
KLB3-3600R40 bis..4400R40	AS 0040	6,2 Nm	T5120-IP

Примечание ⇄ Моменты затяжки смотрите на странице 253.
 Remark ⇄ For torque screw drivers see page 253.
 Note ⇄ Pour les tournevis dynamométriques, voir page 253.

