

Übersicht Ersatzteile

Overview Spare Parts
Комплектующие

Artikel / Item / Артикул
Schlüssel / Key / Ключ
KS 1751
KS 1886
KS 2510
KS 2520
KS 2525
Schlüssel für Halter / Key for holder / Ключ к державке
KS 2505
Schlüssel für Hülse / Key for sleeve / Ключ к стержню
KP 3421
Klemmschraube / Clamping screw / Крепежный винт
SA3T
SA4T
SA5T
SM2T8
SN2T
SN2TM
SN3T
SN4MT
SN4T
SN5LT
SN5T
SN6MT
SN6T
Klemmschraube für Hülse
Clamping screw for sleeve / Крепежный винт для стержня
S4.0
Schraube + Scheibe für Unterlegplatte
Screw + washer for support pad / Винт + втулка опорной пластины
SY3T
SY4T
SY5T

Artikel / Item / Артикул
Unterlegplatte / Support pad / Опорная пластина
YE3
YE3-1.5N
YE3-1N
YE3-1P
YE3-2N
YE3-2P
YE3-3N
YE3-3P
YE4
YE4-1.5N
YE4-1N
YE4-1P
YE4-2N
YE4-2P
YE4-3N
YE4-3P
YE4U
YE5
YE5U
YI3
YI3-1.5N
YI3-1N
YI3-1P
YI3-2N
YI3-2P
YI3-3N
YI3-3P
YI4
YI4-1.5N
YI4-1N
YI4-1P
YI4-2N
YI4-2P
YI4-3N
YI4-3P
YI4U
YI4U-1.5N
YI4U-1N
YI4U-1P
YI4U-2N
YI4U-2P
YI4U-3N
YI4U-3P
YI5
YI5-1.5N
YI5-1N
YI5-1P
YI5-2N
YI5-2P
YI5-3N
YI5-3P
YI5U
YI5U1.5N
YI5U-1N
YI5U-1P
YI5U-2N
YI5U-2P
YI5U-3N
YI5U-3P