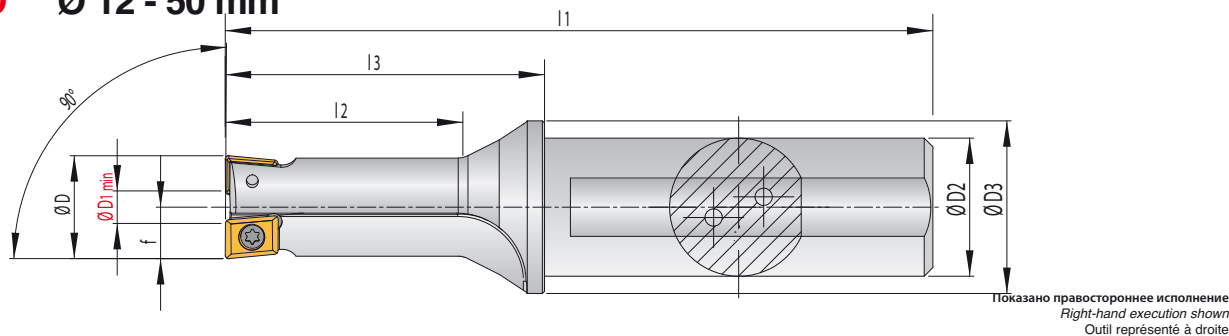


Сверление отверстий глубиной / Drilling depth up to / Profondeur de perçage jusqu'à
2,25 x D Ø 12 - 50 mm


Державки / Holder / Porte-outil

Обозначение Designation Désignation	Ø D	Ø D1 min	Ø D2	Ø D3	l1	l2	l3	f	z	Пластины Inserts Plaquettes
SCR 1204 R02-0027G04 *	12	4	16	20	82	27	37	5	2	LPET / LPNT 0401....
SCR 1305 R02-0029G04 *	13	5	16	20	84	29	39	6	2	LPET / LPNT 0401....
SCR 1406 R02-0032G04 *	14	6	16	20	86	32	41	7	2	LPET / LPNT 0401....
SCR 1507 R02-0034G04 *	15	7	16	20	88	34	43	8	2	LPET / LPNT 0401....
SCR 1606 R02-0036G05	16	6	20	25	97	36	47	7	2	LPET / LPNT 0502....
SCR 1707 R02-0038G05	17	7	20	25	99	38	49	8	2	LPET / LPNT 0502....
SCR 17575 R02-0039G05	17,5	7,5	20	25	101	39	51	8,5	2	LPET / LPNT 0502....
SCR 1806 R02-0041G06	18	6	20	25	102	41	52	7	2	LPET / LPNT 0602....
SCR 1907 R02-0043G06	19	7	20	25	104	43	54	8	2	LPET / LPNT 0602....
SCR 2006 R02-0045G07	20	6	25	32	114	45	58	7	2	LPET / LPNT 0703....
SCR 2107 R02-0047G07	21	7	25	32	116	47	60	8	2	LPET / LPNT 0703....
SCR 2208 R02-0050G07	22	8	25	32	118	50	62	9	2	LPET / LPNT 0703....
SCR 2309 R02-0052G07	23	9	25	32	120	52	64	10	2	LPET / LPNT 0703....
SCR 2408 R02-0054G08	24	8	25	32	122	54	66	9	2	LPET / LPNT 0803....
SCR 2509 R02-0056G08	25	9	32	40	130	56	70	10	2	LPET / LPNT 0803....
SCR 2608 R02-0059G09	26	8	32	40	134	59	74	9	2	LPET / LPNT 09T3....
SCR 2709 R02-0061G09	27	9	32	40	137	61	77	10	2	LPET / LPNT 09T3....
SCR 2810 R02-0063G09	28	10	32	40	140	63	80	11	2	LPET / LPNT 09T3....
SCR 2909 R02-0065G10	29	9	32	40	144	65	84	10	2	LPET / LPNT 10T3....
SCR 3010 R02-0068G10	30	10	32	40	146	68	86	11	2	LPET / LPNT 10T3....
SCR 3111 R02-0070G10	31	11	32	40	149	70	89	12	2	LPET / LPNT 10T3....
SCR 3212 R02-0072G10	32	12	32	40	151	72	91	13	2	LPET / LPNT 10T3....
SCR 3313 R02-0075G10	33	13	32	40	154	75	94	13	2	LPET / LPNT 10T3....
SCR 3414 R02-0077G10	34	14	32	40	156	77	96	15	2	LPET / LPNT 10T3....
SCR 3510 R02-0079G13	35	10	40	50	166	79	96	10	2	LPET / LPNT 1304....
SCR 3611 R02-0081G13	36	11	40	50	168	81	98	11	2	LPET / LPNT 1304....
SCR 3712 R02-0083G13	37	12	40	50	170	83	100	12	2	LPET / LPNT 1304....
SCR 3813 R02-0086G13	38	13	40	50	173	86	103	13	2	LPET / LPNT 1304....
SCR 3914 R02-0088G13	39	14	40	50	175	88	105	14	2	LPET / LPNT 1304....
SCR 4015 R02-0090G13	40	15	40	50	177	90	107	15	2	LPET / LPNT 1304....
SCR 4116 R02-0092G13	41	16	40	50	179	92	109	16	2	LPET / LPNT 1304....
SCR 4217 R02-0095G13	42	17	40	50	182	95	112	17	2	LPET / LPNT 1304....
SCR 4318 R02-0097G13	43	18	40	50	185	97	115	18	2	LPET / LPNT 1304....
SCR 4419 R02-0099G13	44	19	40	50	187	99	117	19	2	LPET / LPNT 1304....
SCR 4513 R02-0101G17	45	13	40	55	192	101	122	13	2	LPET / LPNT 1705....
SCR 4614 R02-0104G17	46	14	40	55	194	104	124	14	2	LPET / LPNT 1705....
SCR 4715 R02-0106G17	47	15	40	55	196	106	126	15	2	LPET / LPNT 1705....
SCR 4816 R02-0108G17	48	16	40	55	198	108	128	16	2	LPET / LPNT 1705....
SCR 4917 R02-0110G17	49	17	40	55	200	110	130	17	2	LPET / LPNT 1705....
SCR 5018 R02-0113G17	50	18	40	55	203	113	133	18	2	LPET / LPNT 1705....

* Правосторонняя державка - правосторонние пластины

* Right-hand holder - Right-hand indexable insert

* Outil à droite - plaquette à droite

ИНФОРМАЦИЯ: Державки комплектуются винтами и набором запасных винтов, но поставляются без ключа

INFORMATION: Holder will be supplied with clamping screws and spare screws, however without key.

NOTE: Les outils sont fournis avec les vis de serrage et les vis de rechange mais sans la clé

Примечание: запасные части на стр. 191. / Remark: Spare parts and accessories see page 191. /
 Note: Pièces de rechange et accessoires voir page 191