


Klemmhalter

Tool holders

Державки


Außengewinde
External Thread
Наружная резьба

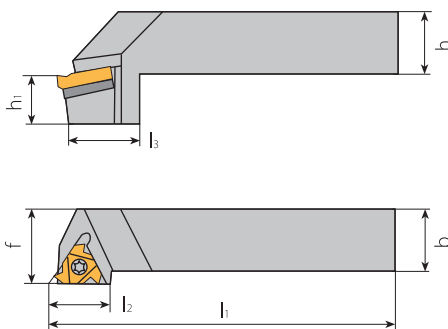


Ausführung / Type / Тип
Abgekröpfter Kopf
Drop head
Для перевернутого положения

Rechte Ausführung abgebildet
Right-hand execution shown
Показано правостороннее исполнение

Halter / Holder / Державки

	Bezeichnung Designation Обозначение	h = b	h ₁	b ₁	c	c ₁	l ₁
16	AL20-3CQ R/L	20	17,5	25	125	24	38
16	AL25-3CQ R/L	25	22,2	32	150	24	38
16	AL32-3CQ R/L	32	22,2	40	170	24	38
22	AL25-4CQ R/L	25	22,2	32	150	30	38
22	AL32-4CQ R/L	32	22,2	40	170	30	38
27	AL32-5CQ R/L	32	25,4	40	170	33	43

Ersatzteile / Spare parts / Комплектующие

	Klemmschraube Clamping screw Винт крепления	Schraube + Scheibe für Unterlegplatte Screw + washer for support pad Винт опорной пластины + втулка	Schlüssel Key Ключ	Unterlegplatte Support pad Опорная пластина R	Unterlegplatte Support pad Опорная пластина L
16	SA3T	SY3T	KS 2510	YE3	YI3
22	SA4T	SY4T	KS 2520	YE4	YI4
27	SA5T	SY5T	KS 2525	YE5	YI5

