


# Trapezgewinde

Trapezoidal thread

Трапецеидальная резьба

# DIN 103

## Innengewinde / Internal threading / Внутренняя резьба

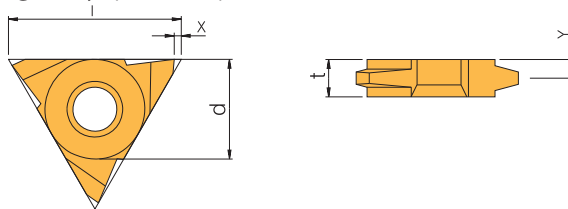

Ausführung / Type / Тип:

V


Rechte Ausführung abgebildet / Right-hand execution shown / Показано правостороннее исполнение

Teilung Pitch Шар	Links Left Левая	Rechts Right Правая	d	h <sub>min</sub>	x	y	t	Sorten / Grades / Сплавы			Klemmhalter Tool holder Державка
								AL100	AM7C	AM15C	
27	6,0	<b>27VIR-V-TR103/6,0</b>	15,88	3,50	1,0	3,3	6	●	●	●	NVR...5V
27	6,0	<b>27VIL-V-TR103/6,0</b>	15,88	3,50	1,0	3,3	6	●	●	●	NVR...5V
27	7,0	<b>27VIR-V-TR103/7,0</b>	15,88	4,00	1,0	3,3	6	●	●	●	NVR...5V
27	7,0	<b>27VIL-V-TR103/7,0</b>	15,88	4,00	1,0	3,3	6	●	●	●	NVR...5V
27	8,0	<b>27VIR-V-TR103/8,0</b>	15,88	4,50	1,0	3,3	6	●	●	●	NVR...5V
27	8,0	<b>27VIL-V-TR103/8,0</b>	15,88	4,50	1,0	3,3	6	●	●	●	NVR...5V
27	9,0	<b>27VIR-V-TR103/9,0</b>	15,88	5,00	1,0	4,3	8	●	●	●	NVR...5V
27	9,0	<b>27VIL-V-TR103/9,0</b>	15,88	5,00	1,0	4,3	8	●	●	●	NVR...5V
27	10,0	<b>27VIR-V-TR103/10,0</b>	15,88	5,50	1,0	4,3	8	●	●	●	NVR...5V
27	10,0	<b>27VIL-V-TR103/10,0</b>	15,88	5,50	1,0	4,3	8	●	●	●	NVR...5V
27	12,0	<b>27VIR-V-TR103/12,0</b>	15,88	6,50	1,0	5,2	10	●	●	●	NVR...5V
27	12,0	<b>27VIL-V-TR103/12,0</b>	15,88	6,50	1,0	5,2	10	●	●	●	NVR...5V

P	●	○	
M	●	●	●
K	○	○	
N			●
S	○		
H			

● Hauptanwendung  
Main application  
Основное применение

○ Nebenanwendung  
Secondary application  
Вторичное применение

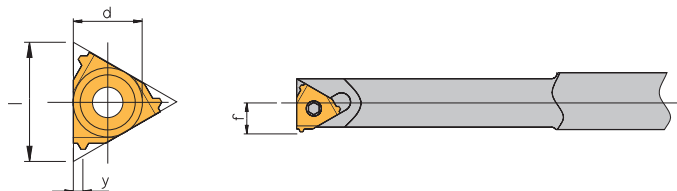

Ausführung / Type / Тип:

MINI 3

Rechte Ausführung abgebildet / Right-hand execution shown / Показано правостороннее исполнение

Teilung Pitch Шар	Links Left Левая	Rechts Right Правая	d	h <sub>min</sub>	y	f	Min Bohr ø min Drill ø мин. ø отв.	Sorten / Grades / Сплавы		Klemmhalter Tool holder Державка
								AM15C	HSS-TiN	
10	1,5	<b>6IR-V-TR103/1,5</b>	6,0	0,85	0,85	5,3	10,0	●	●	...NVR1...-6.0*
10	1,5	<b>6IL-V-TR103/1,5</b>	6,0	0,85	0,85	5,3	10,0	●	○	...NVR1...-6.0*
10	2,0	<b>6IR-V-TR103/2,0</b>	6,0	1,25	1,3	5,3	10,0	●	●	...NVR1...-6.0*
10	2,0	<b>6IL-V-TR103/2,0</b>	6,0	1,25	1,3	5,3	10,0	●	●	...NVR1...-6.0*

\*Grundhalter finden Sie auf Seite 344.  
Please see page 344 for holder.  
Державки см. на стр. 344.

P	○	●
M	●	○
K		
N		
S		○
H		

● Hauptanwendung  
Main application  
Основное применение

○ Nebenanwendung  
Secondary application  
Вторичное применение

5