


Unterlegplatten für Klemmhalter

Support Pads for Tool holders

Выбор опорной пластины

Steigungswinkel-Diagramm / Helix angle diagram / Диаграмма угла подъёма резьбы

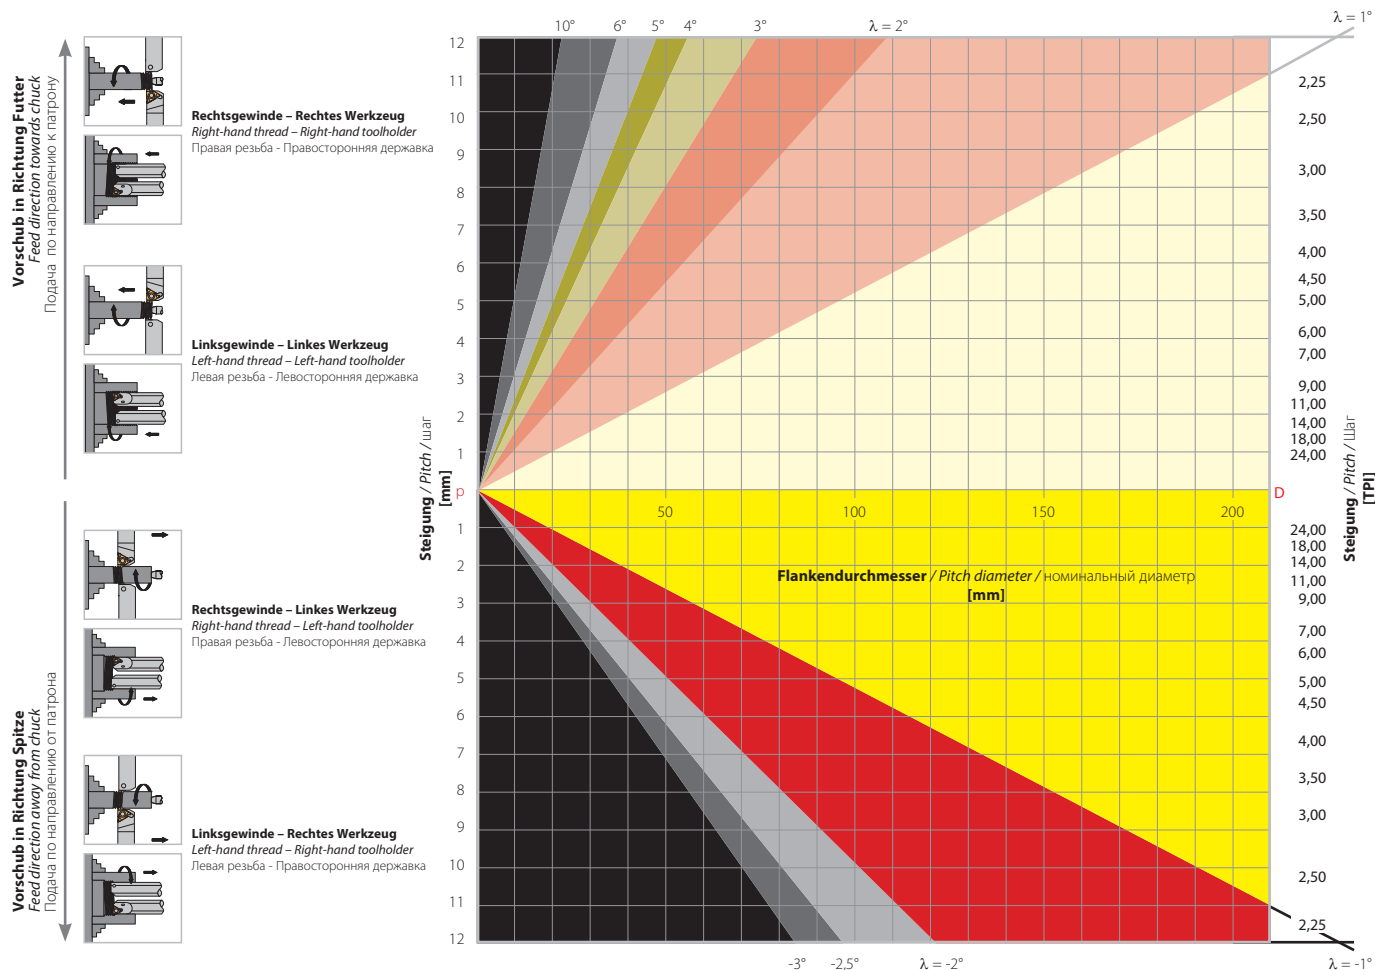

Unterlegplatten / Support pads / Опорные пластины

Außengewinde External thread Наружная резьба	Klemmhalter Holder Державка	Steigungswinkel / Helix angle / Угол подъёма резьбы							
		4,5°	3,5°	2,5°	1,5°	0,5°	0°	-0,5°	-1,5°
16	R	YE 3-3P	YE 3-2P	YE 3-1P	YE 3	YE 3-1 N	YE 3-1,5N	YE 3-2N	YE 3-3N
	L	YI 3-3P	YI 3-2P	YI 3-1P	YI 3	YI 3-1 N	YI 3-1,5N	YI 3-2N	YI 3-3N
22	R	YE 4-3P	YE 4-2P	YE 4-1P	YE 4	YE 4-1 N	YE 4-1,5N	YE 4-2N	YE 4-3N
	L	YI 4-3P	YI 4-2P	YI 4-1P	YI 4	YI 4-1 N	YI 4-1,5N	YI 4-2N	YI 4-3N
22 U	R	YE 4U-3P	YE 4U-2P	YE 4U-1P	YE 4U	YE 4U-1 N	YE 4U-1,5N	YE 4U-2N	YE 4U-3N
	L	YI 4U-3P	YI 4U-2P	YI 4U-1P	YI 4U	YI 4U-1 N	YI 4U-1,5N	YI 4U-2N	YI 4U-3N
27	R	YE 5-3P	YE 5-2P	YE 5-1P	YE 5	YE 5-1 N	YE 5-1,5N	YE 5-2N	YE 5-3N
	L	YI 5-3P	YI 5-2P	YI 5-1P	YI 5	YI 5-1 N	YI 5-1,5N	YI 5-2N	YI 5-3N
27U	R	YE 5U-3P	YE 5U-2P	YE 5U-1P	YE 5U	YE 5U-1 N	YE 5U-1,5N	YE 5U-2N	YE 5U-3N
	L	YI 5U-3P	YI 5U-2P	YI 5U-1P	YI 5U	YI 5U-1 N	YI 5U-1,5N	YI 5U-2N	YI 5U-3N
Innengewinde Internal thread Внутренняя резьба									
16	R	YI 3-3P	YI 3-2P	YI 3-1P	YI 3	YI 3-1 N	YI 3-1,5N	YI 3-2N	YI 3-3N
	L	YE 3-3P	YE 3-2P	YE 3-1P	YE 3	YE 3-1 N	YE 3-1,5N	YE 3-2N	YE 3-3N
22	R	YI 4-3P	YI 4-2P	YI 4-1P	YI 4	YI 4-1 N	YI 4-1,5N	YI 4-2N	YI 4-3N
	L	YE 4-3P	YE 4-2P	YE 4-1P	YE 4	YE 4-1 N	YE 4-1,5N	YE 4-2N	YE 4-3N
22 U	R	YI 4U-3P	YI 4U-2P	YI 4U-1P	YI 4U	YI 4U-1 N	YI 4U-1,5N	YI 4U-2N	YI 4U-3N
	L	YE 4U-3P	YE 4U-2P	YE 4U-1P	YE 4U	YE 4U-1 N	YE 4U-1,5N	YE 4U-2N	YE 4U-3N
27	R	YI 5-3P	YI 5-2P	YI 5-1P	YI 5	YI 5-1 N	YI 5-1,5N	YI 5-2N	YI 5-3N
	L	YE 5-3P	YE 5-2P	YE 5-1P	YE 5	YE 5-1 N	YE 5-1,5N	YE 5-2N	YE 5-3N
27 U	R	YI 5U-3P	YI 5U-2P	YI 5U-1P	YI 5U	YI 5U-1 N	YI 5U-1,5N	YI 5U-2N	YI 5U-3N
	L	YE 5U-3P	YE 5U-2P	YE 5U-1P	YE 5U	YE 5U-1 N	YE 5U-1,5N	YE 5U-2N	YE 5U-3N